

Main Menu Functions

- | | |
|----------------------------------|---------------------------------|
| 1 Play Messages | 4 ⁴ Personal Options |
| 2 ^{abc} Record Messages | 5 ^{abc} Resend Message |
| 3 st Change Greetings | * Exit |

Messaging

You can send and receive text messages to and from other Iridium Satellite phones and regular email addresses (160 character limit).

How to send a message to another Iridium Satellite phone

1. Press the **OK** key.
2. Scroll to **Message Editor**, press **OK**.
3. Compose a message using the keypad (see the Manufacturer's Manual for full instructions).
4. Press **OK**.
5. **Send Message?** will appear, press **OK**.
6. Enter 00 followed by the other Iridium Satellite phone then press **OK**.
7. The message will now be sent.

How to send a message to an email address


1. Press the **OK** key.
2. Scroll to **Message Editor**, press **OK**.
3. Before you compose your message, enter the email address followed by a space. Then enter your message.
4. Press **OK**.
5. **Send Message?** will appear, press **OK**.
6. Enter the destination number as **00* 2** and press **OK**.
7. The message will now be sent.

How to view a message

When you receive a message, the phone will beep and will display **Message Read Now?** on the screen. Press **OK** to view your message.

Helpful hints

- For the phone to work you will need to be outdoors with a clear view of the sky, away from buildings and tall structures. Rotate and fully extend antenna into the angled (45°) position.

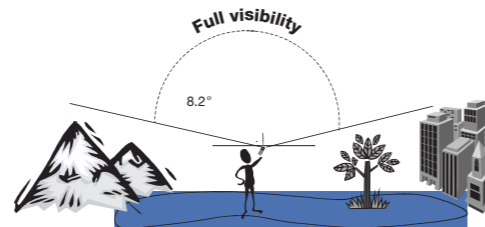

- Before you can use the phone, you will have to wait until it registers on the network. (You will see the and indicators)
- If the phone does not register (missing), press **↑ 8 ^{sub}**.
- To make sure you remain connected, talk with antenna positioned above your head and vertical to the ground.

Please note: Some countries prohibit the use of satellite phones. Contact us for details.

Customer service assistance

For customer service support while traveling, contact our Customer Service Team.

Phone

US Toll Free: 800 335 3705
Outside of the US: +1 619 226 6086

Fax

US Toll Free: 800 335 3705
Outside of the US: +1 619 226 6095

Email

info@phonerentalusa.com

Lost, damaged and stolen phones

If your phone is lost, damaged or stolen, it is essential that you contact us immediately to report the incident and have the phone disconnected. Your liability for phone call charges will cease on disconnection.

When you call Phonerental to report the incident you will be asked for the following information:

Your name**The phone number****Where the phone was lost, stolen or damaged****The time of the incident**

If your phone is stolen, you must also obtain a local police report and supply the crime reference number to Phonerental. You will be requested to confirm this information in writing. Please see Terms and Conditions for full details.

**Iridium Satellite Phone User's Guide**

A service provided to you from Phonerental

3065 Rosecrans Pl.
Suite 107
San Diego, CA
92110
USA



Basic operations

How to turn the phone on and off

Press and hold the **⓪** button, located on the bottom left corner.

How to place a call

Please note: You will need to be outside with a clear view of the sky, away from tall structures to place a call.

1. Rotate and extend the antenna to the angled 45° position, shown below.
2. Press **0+** and hold for two seconds.
3. Enter the country code for the country you are calling.
4. Enter the phone number and press **OK**.

An international access prefix must be used when dialing phone numbers in Satellite Mode.

Please note: Calls made from the phone can be up to \$12.99 per minute.



How to answer a call (with antenna rotated and extended to 45°)

1. When you receive a call, **Call** will be displayed on the screen followed by **Answer?**
2. Press **OK** to answer. To end the call press **C**.

How to answer a call (with antenna stowed)

1. The phone will alert you there is an incoming call.
2. Rotate and extend the antenna to the 45° angle.
3. The phone will ring.
4. **Call** will be displayed on the screen followed by **Answer?**
5. Press **OK** to answer. To end the call press **C**.

Special features

How to adjust the earpiece volume

Press the upper and lower volume keys on the side of the phone.

How to adjust the ringer volume

Press **↑** then the upper and lower volume keys.

How to clear the last digit in the display or exit a submenu

Press **C**.

How to clear the entire display or exit the menu system

Press and hold **C**.

How to lock the keypad

Press the ***** and **#** keys simultaneously to lock the keypad and prevent accidental usage of the phone. All keys, with the exception of the **⓪** button, will be disabled. You can still answer an incoming call by pressing **OK** when the keypad is locked.

To remove the keypad lock, press the ***** and **#** keys simultaneously.

How to display your phone number on screen

Press **MIR** then **#**.

Quick access menu

Press **↑** then:

- | | |
|-------------------------|-----------------------------|
| 1 Find Name | 5 Lock Keys |
| 2 Mute | 6 Vibrate On/Off |
| 3 Call Voicemail | 7 Read Text Messages |
| 4 Battery Meter | 8 Register Now |

Phone book

How to recall a number from the phone book

1. Press **MIR**.
2. Enter the one-, two-, or three-digit number relating to the entry.
3. Press **OK**.
4. Press **OK** to call the displayed entry.

How to recall the last ten numbers dialed

1. Press **MIR** until you see **Phone Book**.
2. Press **OK**.
3. Use **MIR** to scroll to **Last Ten Calls** and then press **OK** to select.
4. Use **MIR** to scroll to **Last Calls Made** and then press **OK** to select.
5. Use **MIR** to scroll to the number you are looking for.
6. Press **OK** to place a call to that number.

Voicemail

Due to the nature of the Iridium system, voicemail messages will not be automatically delivered to the phone. After a new message has been left, it will not be delivered until a call is made or received on the phone.

To eliminate this, a **FREE** call can be made at any time to the Iridium test number. This allows you to receive any new voicemail messages left since the phone was last used.

How to dial the Iridium test number

1. Dial **1234**.
2. You will hear a short message welcoming you to the Iridium system. During this time, any new text or voicemail messages will be delivered to the phone.
3. End the call once you have listened to the welcome message two times.

When you receive a new voicemail message a **MIR** will appear on the screen.

How to retrieve your voicemail

1. Press the **MIR** key.
2. **Call Voicemail Select?** will be displayed, press **OK**.
3. You will be asked to enter your Iridium Satellite phone number (this is the 8816 **** * number on the back of the handset).
4. Interrupt the next message by pressing *****.
5. You will be asked to enter the password (this is the last 7 digits of the phone number).
6. You will now be in the Main Menu.